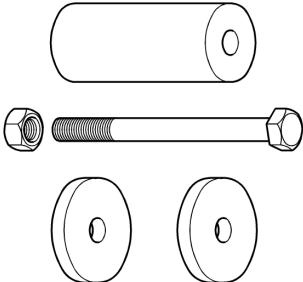
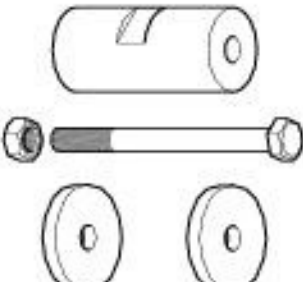
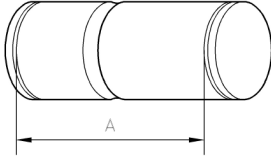


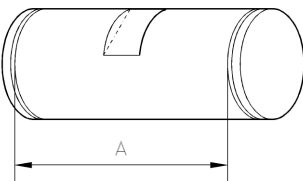
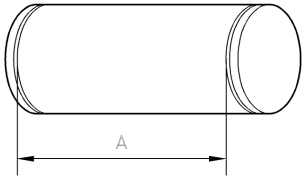
BRAKE PARTS
*Brake Shoe Anchor Pins &
 Brake Shoe Repair Bosses*




BRAKE SHOE ANCHOR PINS

	PART NO.	REPLACES AND INCLUDES	DIMENSIONS OF BOSSES			APPLICATION AND GENERAL INFORMATION
			O.D	I.D	O.A.L.	
	03.3201.0	Bolt-On Version of 3.3203.0 Includes: 1 03.3201.1 Boss 2 03.3175.0 End Washers 1 03.3176.0 Bolt and Nut	1-1/4" = 31.8mm	25/64" = 9.9mm	2.181" = 55.4mm	For Eaton, Fruehauf, Rockwell, Spicer and Std. Forge Brakes For Boss Only Order 03.3201.1
	03.3249.0	Bolt-On Version of 03.3248.0 Includes: 1 03.3249.1 Boss 2 03.3175.0 End Washers 1 03.3176.0 Bolt and Nut	1" = 25.4mm	25/64" = 9.9mm	2-5/32" = 54.8mm	For Std. Forge 12-1/4" Dia. Brakes with Fabricated Shoes Installed on Weld On Spider For Boss Only Order 03.3249.1
	03.3304.05	Longer Bolt-On Version of 03.3203.0 for use with 03.3302.1 Weld On Repair Bosses Includes: 1 03.3304.1 Boss 2 03.3175.0 End Washers 1 03.3177.0 Bolt and Nut	1-1/4" = 31.8mm	25/64" = 9.9mm	2.819" = 71.6mm	For Eaton, Fruehauf, Rockwell, Spicer and Std. Forge Brakes For Boss Only Order 03.3304.1
	03.3349.0	Longer Bolt-On Version of 03.3249.0 for use with 03.3300.0 Weld On Repair Bosses Includes: 1 03.3249.1 Boss 2 03.3175.0 End Washers	1" = 25.4mm	25/64" = 9.9mm	2-27/32" = 72.2mm	For Std. Forge 12-1/4" Dia. Brakes with Fabricated Shoes Installed on Weld On Spider For Boss Only Order 03.3349.1
	03.3305.08	Longer Version of 03.3304.05	1-1/4" = 31.8mm	25/64" = 9.9mm	3.051" = 77.5mm	Meritor
	03.3348.0	Longer Version of 03.3248.0 for use with 03.3300.0 Weld On Repair Bosses	1" = 25.4mm	2-15/16" = 74.6mm	3.221" = 81.8mm	For Std. Forge 12.25" Dia. Brakes with Fabricated Shoes Installed on Weld On Spider Use with 03.3164.0 Washer and 03.3163 Circlio
	03.3351.0	Bolt-On -Bushed Brake Shoe- Version of 03.3232.0 Use 03.3301.0 Bosses with Std. Brake Shoes and 03.3301.1 Bosses	1-1/4" = 31.8mm	25/64" = 9.9mm	2.969" = 75.4mm	For Fruehauf and Rockwell Truck Fabricated Heavy Duty Bushed Shoes
	03.3213.0	"C" Washer Anchor Pin Rockwell 1259-N-170, Spicer M10WJ164 and Std. Forge 203106	O.D.	A	DIM. O.A.L.	For Rockwell and Fruehauf "Pro-Par" Axles with Fabricated Shoes
			1-1/4" = 31.8mm	2.307" = 58.6mm	2.718" = 69mm	

BRAKE PARTS

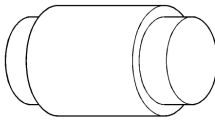
Brake Shoe Anchor Pins & Brake Shoe Repair Bosses

	03.3232.0	Fruehauf 330673, GMC 2295423, Kershaw 11093, Mack 3015M86, IHC 126403R1 Rockwell 1259-0-251 & 1259-T-280 and Std. Forge 203102-001	1-1/4" = 31.8mm	2.307" = 58.6mm	2.659" = 67.5mm	For Fruehauf and Rockwell Truck Fabricated Shoes Use with 03.3121.0 Circlip and 03.3103.0 Washer
	03.3352.0	Bushed Brake Shoe Version of 03.3232.0 Use 03.3301.0 Bosses with Std. Brake Shoes and 03.3301.1 Bosses with HD Brake Shoes Eaton 820012, Fruehauf 219162, IHC 56104R1, Rockwell 1259-R-252 and Spicer M10WJ159	1-1/4" = 31.8mm	3.091" = 78.5mm	3.443" = 87.4mm	For Fruehauf and Rockwell Truck Fabricated Heavy Duty Bushed Shoes Use with 03.3121.0 Circlip and 03.3103.0 Washer
	03.3332.0	Longer Version of 03.3232.0 for use with 03.3302.1 Weld On Repair Bosses	1-1/4" = 31.8mm	2.945" = 74.8mm	3.297" = 83.7mm	For Fruehauf and Rockwell Truck Fabricated Shoes Use with 03.3121.0 Circlip and 03.3103.0 Washer

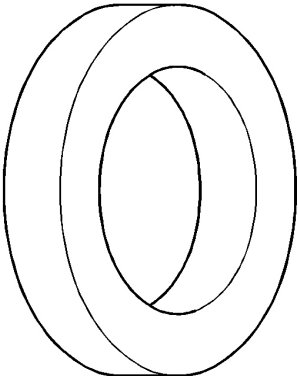
		PART NO.		REPLACES		O.D.		L.G.		APPLICATION			
		03.3241.0		Std. Forge 203105-001 and Kershaw 11523		Large O.D. 1" = 25.4mm Small O.D. 13/16" = 20.6mm THD 3/4"-16		6-9/32" = 159.5mm		Std. Forge and Kershaw 12-114" Oia. Brakes Use with 03.3172.0 Jam Nut, 70.103.12 Spring Washer, 03.3161.0 Link and 03.3153.0 "C" Washer			
		03.3242.0		Spicer M10HP103 and Std. Forge 203105-003 Same as 03.3241.0 except Drilled for Lubrication		Large O.D. 1" = 25.4mm Small O.D. 13/16" = 20.6mm THD 3/4"-16		6-9/32" = 159.5mm		Std. Forge and Kershaw 12-114" Oia. Brakes Use with 03.3172.0 Jam Nut, 70.103.12 Spring Washer, 03.3161.0 Link and 03.3153.0 "C" Washer			
		PART NO.		REPLACES		END O.D.		MIDDLE O.D.		OVER- ALL LENGTH		APPLICATION AND GENERAL INFORMATION	

BRAKE PARTS

Brake Shoe Anchor Pins & Brake Shoe Repair Bosses

	03.3262.0	-	34.8mm	34.9mm	67.3mm	For Eaton 16-1/2" x 7" Brakes
	03.3237.0	Rockwell 1259-N-274 and Spicer M16WJ105	O.D.	LENGTH OF LARGE O.D	OVER-ALL LENGTH	For Rockwell "Q" Brake and Spicer "Fast Change" Brake
			Large O.D. 1-1/4" = 31.8mm Small O.D. 1" = 25.4mm	1.417" = 36.0mm	2.205" = 56.0mm	

BRAKE SHOE REPAIR BOSSES

	PART NO.	O.D	I.D	THICK	APPLICATION AND GENERAL INFORMATION
	03.3300.0	1-3/4" = 44.5mm	1" = 25.4mm	21/64" = 8.3mm	For Std. Forge Fabricated Steel 12-1/4" Dia. Brake Shoes Weld Inside for use with 03.3241.0 Anchor Pin on Early Model Conversions Weld Outside for use with 03.3348.0 Anchor Pins on Late Model Brakes
	03.3302.1	1-7/8" = 47.6mm	1-1/4" = 31.8mm	0.319" = 8.1mm	Use with 74.8 mm Long Anchor Pins
	03.3303.0	1.969" = 50.0mm	1-1/4" = 31.8mm	0.638" = 16.2 mm	Use with Longer Anchor Pins (90mm to 108mm)