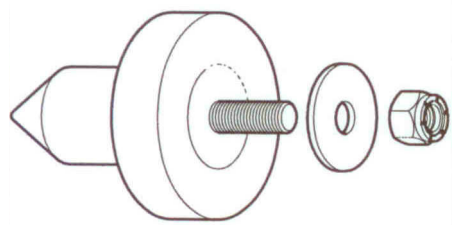



TRUCK PARTS (Excluding Suspension Parts)
Hood Guides & Front Shock Mounting Arms

Hood Guides

	PART NO.	DIMENSIONS	APPLICATION AND GENERAL INFORMATION
<p>POLYURETHANE AND STEEL</p> 	12.6001.8	<p>39.0mm Small O.D.</p> <p>83.5mm Large O.D.</p> <p>1 01.6mm Overall Length of Polyurethane</p>	<p>For Kenworth Trucks</p> <p>Replaces: Kenworth QK179-375</p>

Front Shock Mounting Arms

	PART NO.	DIMENSIONS	APPLICATION AND GENERAL INFORMATION
	99.BTC.001		<p>Western Star Front Shock Mounting Arms</p> <p>Front shocker replacement arm of cast iron type.</p> <p>Suit Western Star all models</p>